

BB 1000M • Installation Guide

IMPORTANT:
Refer to www.extron.com for
the complete TLP 1000 Series
user guide before connecting
the product to the power source.

Overview

The Extron BB 1000M back box is used to mount an Extron TLP 1000MV TouchLink™ panel in a wall. This Installation Guide provides instructions for an experienced installer to retrofit the box in existing drywall or mount the wall box in a new installation. For complete instructions about installing and calibrating the TouchLink panel, see the *TLP 1000MV and TLP 1000TV User Guide*, which are available on the Extron web site (www.extron.com).

Retrofit an Existing Installation (with the Drywall in Place)

1. Remove the screws holding the top and bottom endplates of the wall box to the U-plate (sides and back). Separate and remove the endplates.
2. Use the back face of the U-plate to mark the position where the hole will be cut. Use a level to ensure the U-plate is level.

NOTE: The hole is 10.22 inches (25.96 cm) wide x 7.16 inches (18.2 cm) high.

3. Using a drywall saw, carefully cut a hole where the touchpanel will be installed. Cut **on** the lines that you marked in step 2.
4. Run the cable conduit through the wall. The conduit can be attached to any of the available knock-out holes in the top, bottom, or either side. Leave some slack to connect the conduit to the wall box and the cables to the touchpanel.
5. Run cables to the installation site.
6. Clear the cables and conduits from the space behind the hole.
7. Insert the U-plate into the hole (see figure 1).

NOTE: The tabs of the wall box sit on the outer face of the drywall.

8. Pull back the cables that were cleared out of the way in step 5.
9. Secure one or more conduits to the knock-out holes (see figure 2).

10. Slide the endplates into the gap between the back of the U-plate and the top flanges on the side of the U-plate (see the inset in figure 2). The endplate must pass the drywall so that the trailing edge can be pushed in behind it.

11. Finish installing the TouchLink panel as shown in figure 3 and described in "Mounting the Touchpanel" on the next page.

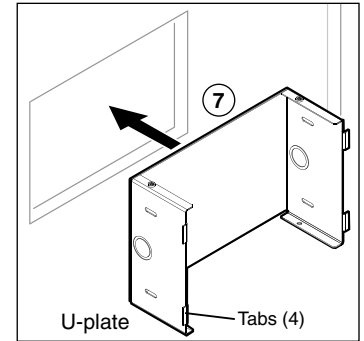


Figure 1.

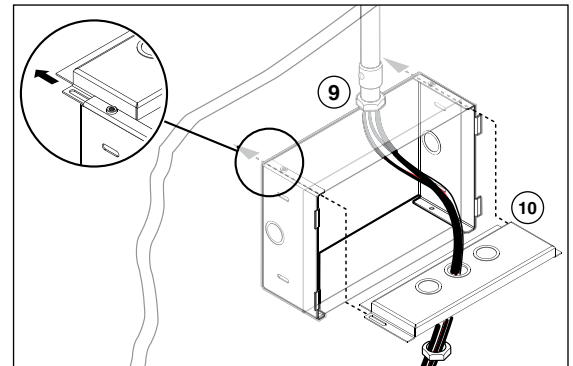


Figure 2.

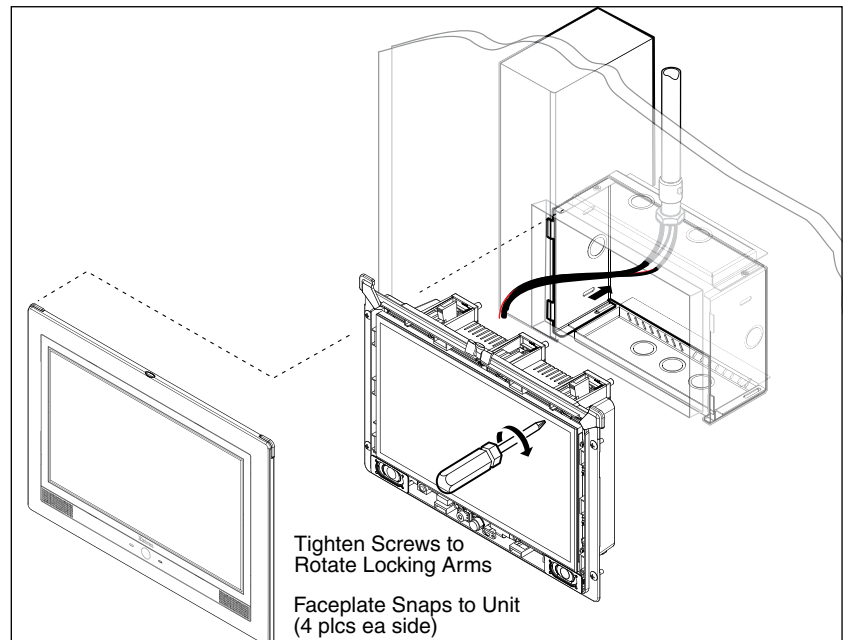


Figure 3.

BB 1000M • Installation Guide (Cont'd)

New Construction Installation

1. Before the drywall has been secured to the studs, place the wall box in a suitable place so that the tabs on the sides of the box are flat against a vertical stud.
2. Secure the wall box to the stud (metal or wooden) using two nails or screws.
3. Run the cable conduits to the box and connect them to one of the available knock-out holes. Leave enough cable to provide slack for installing the TouchLink panel.
4. Measure the position of the wall box, and mark and cut a hole in the drywall where the box is placed.

NOTE: The hole is 10.22 inches (25.96 cm) wide x 7.16 inches (18.2 cm) high.

5. Secure the drywall to the studs.

NOTE: The tabs of the wall box sit on the stud against the inner face of the drywall.

6. If required, paint the drywall. Insert the cardboard cover (provided) into the wall box to avoid getting paint on it.

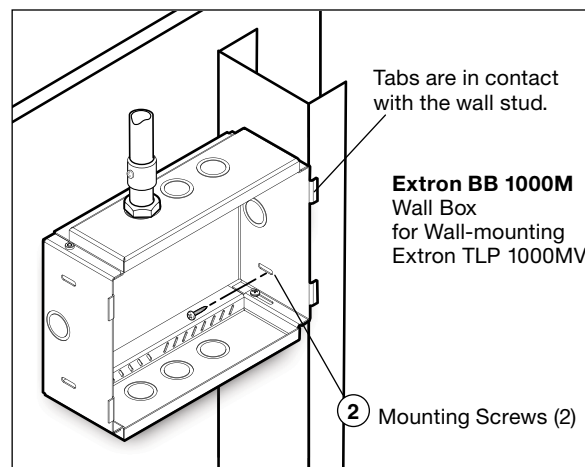


Figure 4.

Mounting the Touchpanel

For complete instructions about installing and calibrating the TouchLink panel, see the *TLP 1000MV and TLP 1000TV User Guide*, available on the Extron website (www.extron.com).

1. Connect the cables to the back of the TouchLink panel (see the User Guide). Feed excess cable back into the conduit.
2. Test the connections and configure the TouchLink panel (see the User Guide).
3. Fold the locking arms into their recesses on the side of the touchpanel and slide the unit into the wall box.
4. Tighten the screws on the front of the unit so that the locking arms rotate into place behind the top and bottom plates of the wall box and hold the unit in place (see figures 3 or 5).
5. Snap the faceplate into position (see figures 3 or 5).

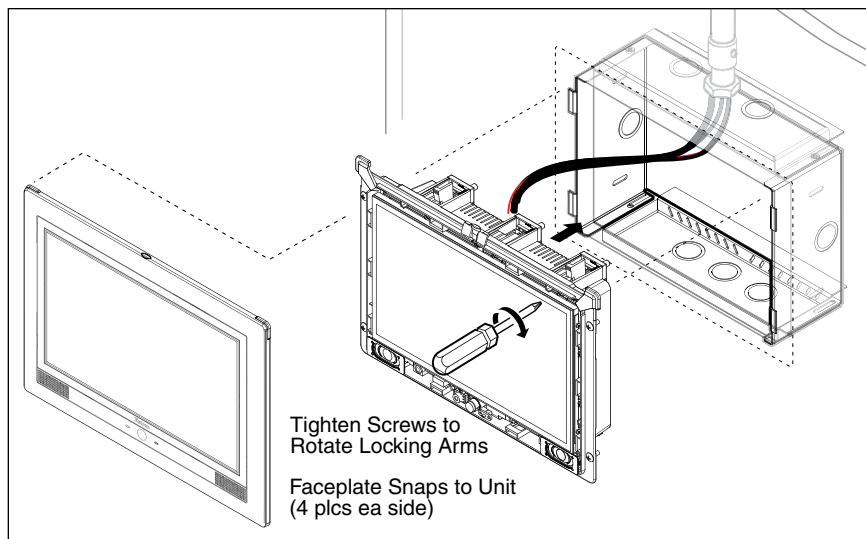


Figure 5.

Extron USA - West Headquarters	Extron USA - East	Extron Europe	Extron Asia	Extron Japan	Extron China	Extron Middle East
+800.633.9876 Inside USA/Canada Only +1.714.491.1500 +1.714.491.1517 FAX	+800.633.9876 Inside USA/Canada Only +1.919.863.1794 +1.919.863.1797 FAX	+800.3987.6673 Inside Europe Only +31.33.453.4040 +31.33.453.4050 FAX	+800.7339.8766 Inside Asia Only +65.6383.4400 +65.6383.4664 FAX	+81.3.3511.7655 +81.3.3511.7656 FAX	+400.883.1568 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX	+971.4.2991800 +971.4.2991880 FAX