


MBU 125 Under-Desk Mounting Kit (Part #70-077-01)

Installation Instructions

The specific device being mounted may ship with a to-scale template located in the device manual. Use the template as a guide for drilling holes, if available.

1. If necessary, remove the feet from the bottom of the device to be installed.
2. Attach the mounting brackets to the device using four machine screws supplied with the mounting kit.
- 3a. **If the device to be mounted included a to-scale, under-desk mounting template**, use the template to mark the four screw holes on the underside of the surface to which you are mounting the device. The other side of this card shows a not-to-scale template example.
- 3b. **If the device to be mounted did not include a to-scale mounting template**, hold the product and brackets on the underside of the surface to which you are mounting the device and mark the four screw holes.

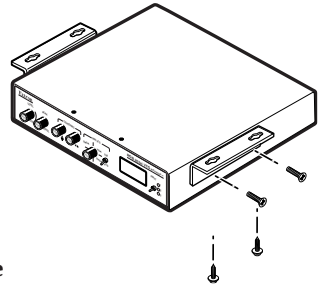


Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
800.633.9876 714.491.1500
FAX 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort, The Netherlands
+800.3987.6673 +31.33.453.4040
FAX +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Rd. #04-01
PM Industrial Bldg., Singapore 368363
+800.7339.8766 +65.6383.4400
FAX +65.6383.4664

Extron Electronics, Japan
Kyodo Building, 16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan
+81.3.3511.7655 FAX +81.3.3511.7656

68-1295-01
Rev. B
07 07



Drill 3/32" x 1/4" deep
pilot holes for supplied
screws (4 places)



Under-Desk Mounting Bracket Template

**Example only –
drawing is not to scale.**



4. Drill four pilot holes, each 3/32" in diameter by 1/4" deep, as marked on the template.
5. Using the four wood screws provided, attach the brackets under the mounting surface.

