

ZipClip 100 • Installation Guide

Getting Started

This manual contains installation instructions for the Extron ZipClip 100.

The Extron ZipClip 100 enables Extron products to be securely mounted on most surfaces including racks, tables, and lecterns.

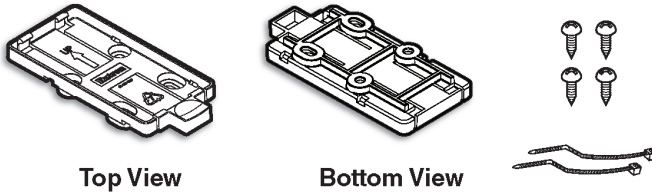


Figure 1. ZipClip 100

Mounting the ZipClip 100

The following diagrams illustrate how the ZipClip 100 attaches to an under-desk mounting surface using the four ZipClip 100 mounting screws (included) (see figure 2) or onto a rack rail (see figure 3 on the next page).

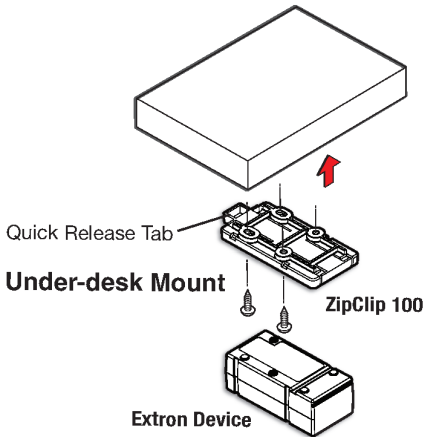


Figure 2. Under-desk Mounting

ZipClip 100 • Installation Guide (Continued)

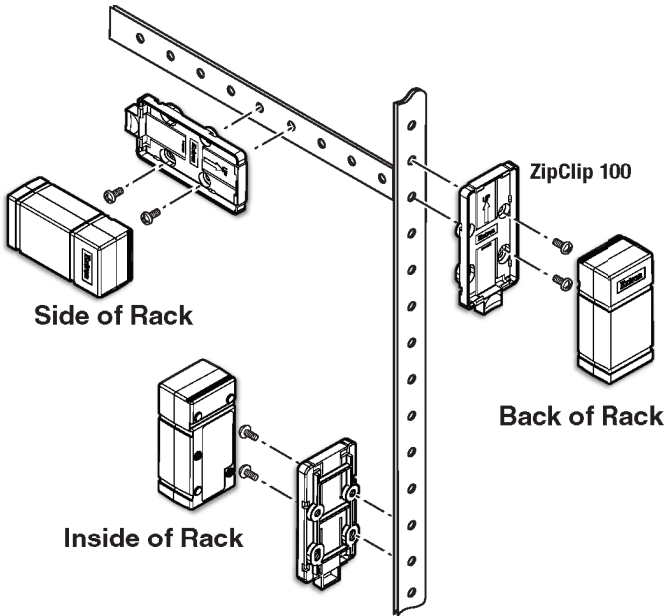


Figure 3. Rack Rail Mounting

Attaching and Removing the ZipClip 100

To attach the product to the ZipClip 100:

1. Insert the bottom of the product down into the clip, starting with one end.
2. Pivot the other end down and press until the clip snaps into place.

To remove the product from the ZipClip 100:

1. Press the quick-release tab on the ZipClip 100.
2. Pivot the product and lift it out of the ZipClip 100.

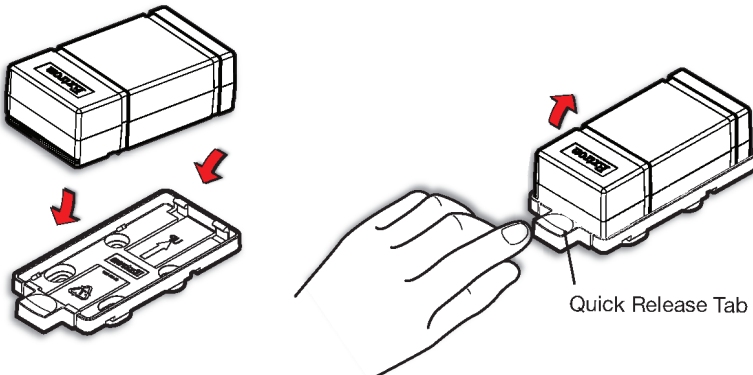


Figure 4. Quick-Release Tab